SII

サーマルプリンタ SLP721RT Bluetooth モデル
クイックスタートガイド

ご使用の前に、 必ず「安全上の注意」、「取扱説明書」をよくお読みの上、 プリンタを安全に正しくお取り扱いください。

取扱説明書とソフトウェアのダウンロード

①Web ページにアクセスしてください。

https://www.sii-ps.com/slp720rt/

②取扱説明書をダウンロードしてお読みください。

③上記 Web ページにて各種ソフトウェアをダウンロードできます。

電源の接続

①ACアダプタにACケーブルを接続してください。

②ACアダプタのDCプラグをプリンタの電源コネクタに接続してください。

③ACケーブルのACプラグをコンセントに接続してください。

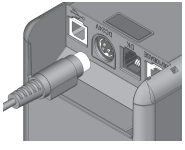

ホスト装置との接続（無線接続）

■Bluetoothペアリング方法

Bluetoothインタフェースでホスト装置と通信するには、ホスト装置とペアリングを行う必要があります。

①スマートデバイス端末の「設定」より、Bluetooth接続を「ON」にしてください。

②プリンタの電源がオフの状態で、電源スイッチ [⏻] を8秒以上押し続けてください。

③LEDが青色に点滅したら、指を離してください（ペアリングモードになります）。

④スマートデバイス端末の設定画面で、デバイス「SLP721RT」をタップし、接続済みになったことを確認してください。

プリンタのLEDが緑色の点灯に変わったら設定完了です。

Web ページでの説明はこちら

紙幅の調整方法

紙ガイドのタブ部を両手でつかみ、ゆっくりと動かしてください。

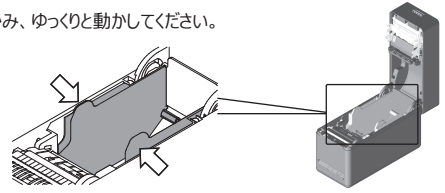

感熱紙のセット方法

プリンタのリリースレバーを上方に引き上げトップカバーを開き、感熱紙をペーパホルダにセットしてください。

トップカバーは中央部を下方に押して、ロックされるまで確実に閉めてください。

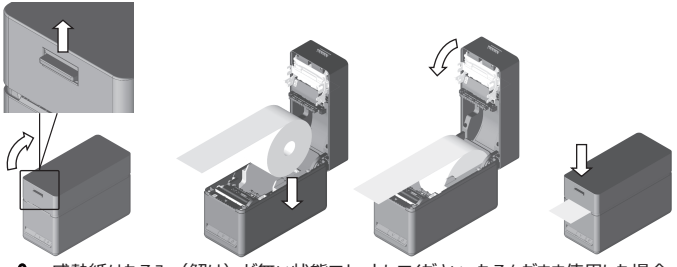

⚠ 感熱紙はたるみ（解け）が無い状態でセットしてください。たるんだまま使用した場合、用紙詰まり等の原因になります。

かんたん用紙設定

ご使用になる用紙を設定する必要があります。以下の手順で簡単に設定できます。

①プリンタの電源スイッチがオンのままで、リリースレバーを操作しトップカバーを開けてください。

②下の表のご使用になる用紙に従い、フィードスイッチを4秒以内にスイッチ回数を押してください。

③4秒後にLEDが1回点滅します。その後トップカバーを閉めてください。

感熱紙選択 (Thermal Paper)	マークモード選択 (Mark Mode)	テイクンモード選択 (Taken Mode)	フィードスイッチ回数	待機時LED選択 (Standby LED)
ライナレスラベル紙 (Linerless label)	無効 (Disable)	有効 (Enable)	3	緑色 (Green)
ライナレスラベル紙 (Linerless label)	有効 (Enable)	有効 (Enable)	4	緑色 (Green)
SLP ラベル紙 (SLP Label)	有効 (Enable)	無効 (Disable)	5	アクア (Aqua)
レシート (Receipt)	無効 (Disable)	無効 (Disable)	6	青色 (Blue)

④LEDが「待機時LED選択」の色の点灯に変わります。

セイコーインスツル株式会社

U00150008500 2024/1

SII

Quick Start Guide

(Thermal Printer SLP721RT Bluetooth Model)

Read through the Safety precautions and the User's guide carefully before using the printer, and handle it safely and properly.

Download User's guide and software

1. Visit our web site.

https://www.sii-ps.com/slp720rt/

2. Download the User's guide and read it.
3. Appropriate software can be downloaded from the above web site.

Label rolls are available from your local Seiko Instruments or its distributors.
Please access www.sii-ps.com/slp/.

Power connection

1. Connect the AC cable to the AC adapter.
2. Plug the DC plug of the AC adapter to the power connector of the printer.
3. Plug the AC plug of the AC cable to an outlet.

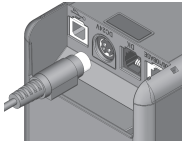

Connecting to host device (Wireless connection)

■Bluetooth pairing

To communicate with the host device using the Bluetooth interface, pairing with the host device is required.

1. Set the Bluetooth connection to "ON" from the "Settings" of the smart device.
2. Press and hold the POWER Switch ⏻ for 8 seconds or more with the printer off state.
3. Release the POWER Switch when the LED blinks blue (enters pairing mode).
4. Tap the device "SLP721RT" on the setting screen of the smart device, and confirm that the connection has been completed.

The setting is complete when the printer's LED turns to steady green.

Adjusting paper width

Hold the tabs of the paper guide with the fingers of both hands and move them slowly.

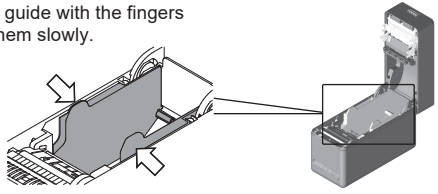

Loading thermal paper

Pull the release lever of the printer upward and open the top cover.
Then load the thermal paper into the paper holder.
Close the top cover firmly by pushing the center part downward until it locks into place.

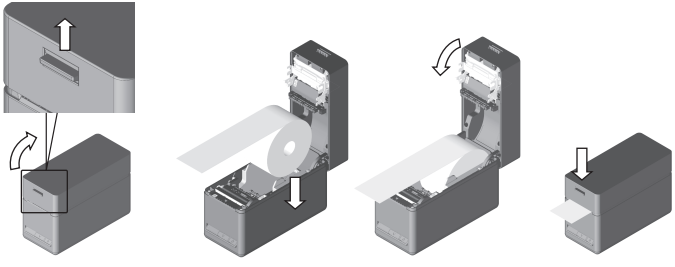

⚠ DO NOT use thermal paper roll with the roll loosens.
If the paper is used while it loosens, it may cause a paper jam.

Easy paper setting

It is necessary to set the paper to be used. It can be easily set by following procesures.

1. With the printer turned on, operate the release lever to open the top cover.
2. Press the FEED Switch a number of times within 4 seconds according to the paper to be used in the table below.
3. The LED blinks once after 4 seconds. Then, close the top cover.

Thermal Paper	Mark Mode	Taken Mode	Number of Times to Press FEED Switch	Standby LED
Linerless label	Disable	Enable	3	Green
Linerless label	Enable	Enable	4	Green
SLP Label	Enable	Disable	5	Aqua
Receipt	Disable	Disable	6	Blue



4. The LED turns to the lighting of ″Standby LED″ color.